


## ASSEMBLY INSTRUCTIONS

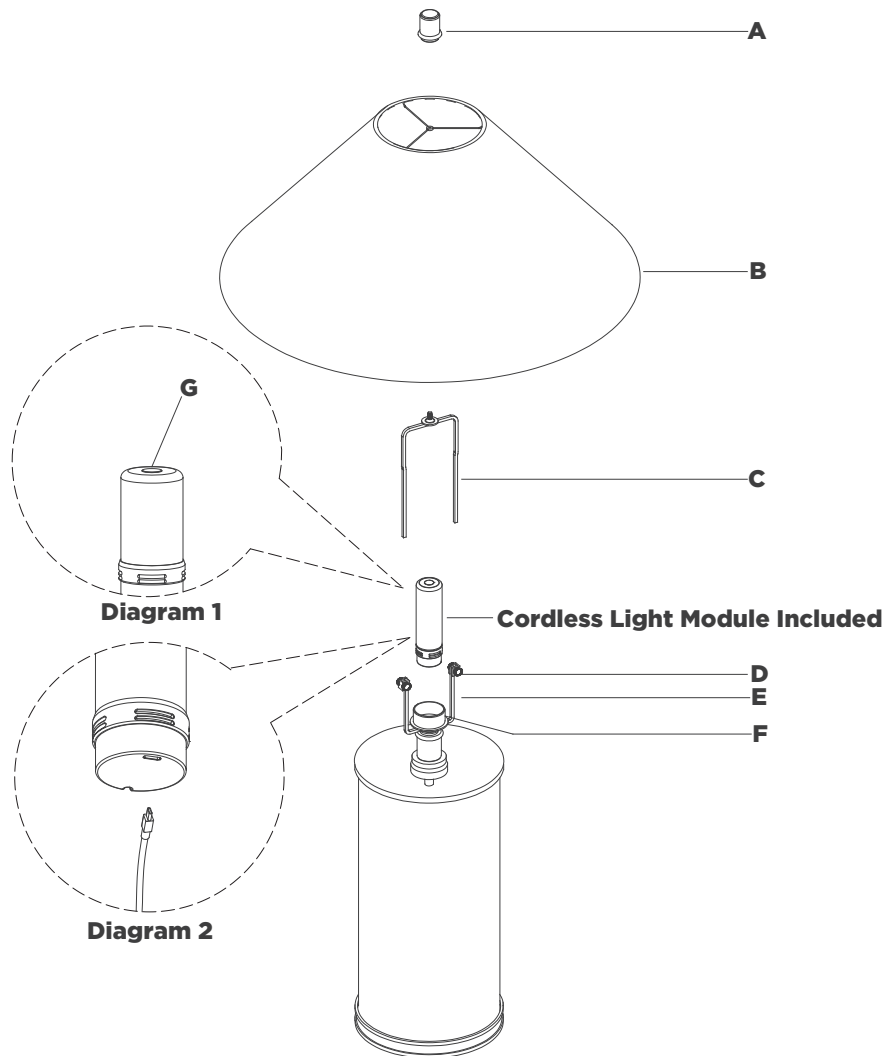

## Modern Cordless Table Lamp

Item # RL3167

### NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
  2. Install harp (C) onto saddle (E), adjust harp (C) to desired height, then tighten adjustment knobs (D).
  3. Remove finial (A) from harp (C).
  4. Remove shade (B) from packaging and install to harp (C) using finial (A).
- NOTE:** If shade has additional packaging, carefully cut from interior of shade to avoid damages.
5. Place cordless light module into cordless module holder (F).
  6. For best results fully charge battery before use.
  7. Test the lamp.

**Dimmer switch operation:** Touch dimmer (G) to adjust between high, medium, low and off settings (See diagram 1).

**Charging Instructions:** Remove cordless light module from lamp and charge using provided USB-C cord (See diagram 2).

**NOTE:** For convenience, USB-C to USB-A adapter is included.



USB TYPE C



USB TYPE A

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

# RALPH LAUREN

