
ASSEMBLY INSTRUCTIONS

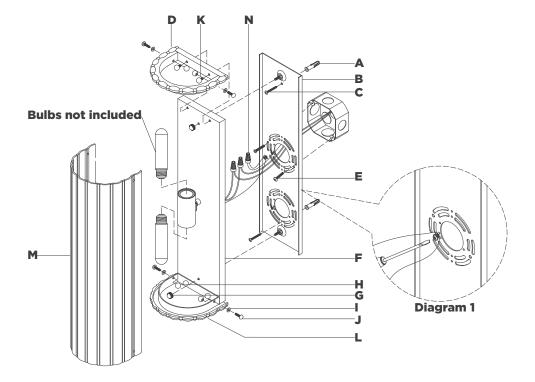

Rosehill 20" Linear Sconce

Item # ARN2014

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Hammer
Pencil Drill

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Remove mounting plate **(B)** from fixture **(F)** by removing threaded caps **(G)**.
- 3. Using mounting plate **(B)** as a guide, line up with the junction box and mark anchor positions.
- 4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (A) into the holes using a hammer.
- 5. Install mounting plate **(B)** to the junction box and secure with mounting screws **(E)**, then secure wood screws **(C)** to anchors **(A)**.
- 6. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(N)**.
 - **NOTE:** It is imperative that the fixture is grounded.
- 7. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(N)**.










ASSEMBLY INSTRUCTIONS

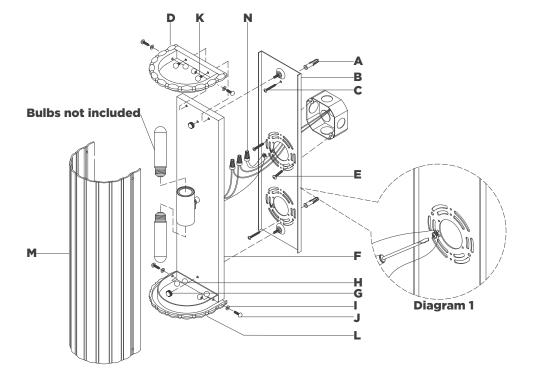

Rosehill 20" Linear Sconce

Item # ARN2014

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 8. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(N)**.
 - **CAUTION:** Do not reverse the hot and neutral connections.
- 9. Make sure all wire connections are tight, then carefully tuck into the junction box.
- 10. Install fixture **(F)** to mounting plate **(B)** and secure with threaded caps **(G)**.
- 11. Install light bulbs into the sockets.
- 12. Place shade (M) onto bottom cap (L) and fixed shade (M) by securing rubber washer (I) and thumbscrews (J) to knobs (H).
 - **NOTE:** Do not overtighten otherwise shade could become damaged.
- 13. Place top cap **(D)** onto top of shade **(M)** and secure with thumbscrews **(K)**, then fixed shade **(M)** by securing rubber washer **(I)** and thumbscrews **(J)** to knobs **(H)**.
 - **NOTE:** Do not overtighten otherwise shade could become damaged.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.





