


## ASSEMBLY INSTRUCTIONS

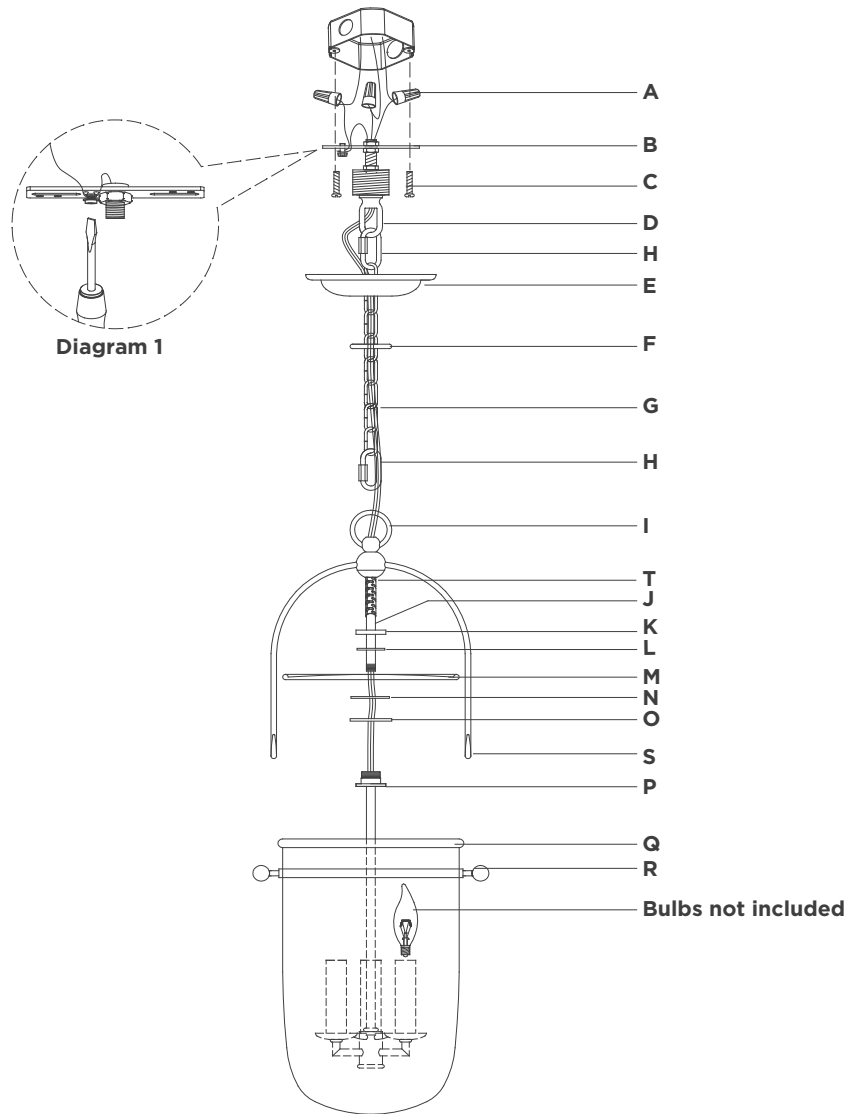

## Lorford Tall Smoke Bell Lantern

Item # CHC 2298

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL.**


**IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove plastic sleeve (T) from tube (J).
3. Remove collar loop (D) from chain (G) by unscrewing quick link (H).
4. Install mounting plate (B) to junction box and secure with mounting screws (C).
5. Secure collar loop (D) to mounting plate (B) using pliers to tighten locknut.
6. Install canopy (E) to collar loop (D) and secure with collar ring (F).
7. Thread fixture wires through metal washer (O), rubber washer (N), glass diffuser (M), rubber washer (L), check ring (K) and tube (J).
8. Attach metal washer (O), rubber washer (N), glass diffuser (M) to the connector (P) and secure with the rubber washer (L) and check ring (K).  
**NOTE:** Do not over-tighten, otherwise glass could become damaged.
9. Thread the tube (J) to the connector (P).
10. Determine desired overall length, and amount of chain (G) needed. Shorten chain using chain pliers. (Keep extra chain)
11. Attach chain (G) to collar loop (D) and fixture loop (I) using quick links (H). Secure quick links (H).

## ASSEMBLY INSTRUCTIONS

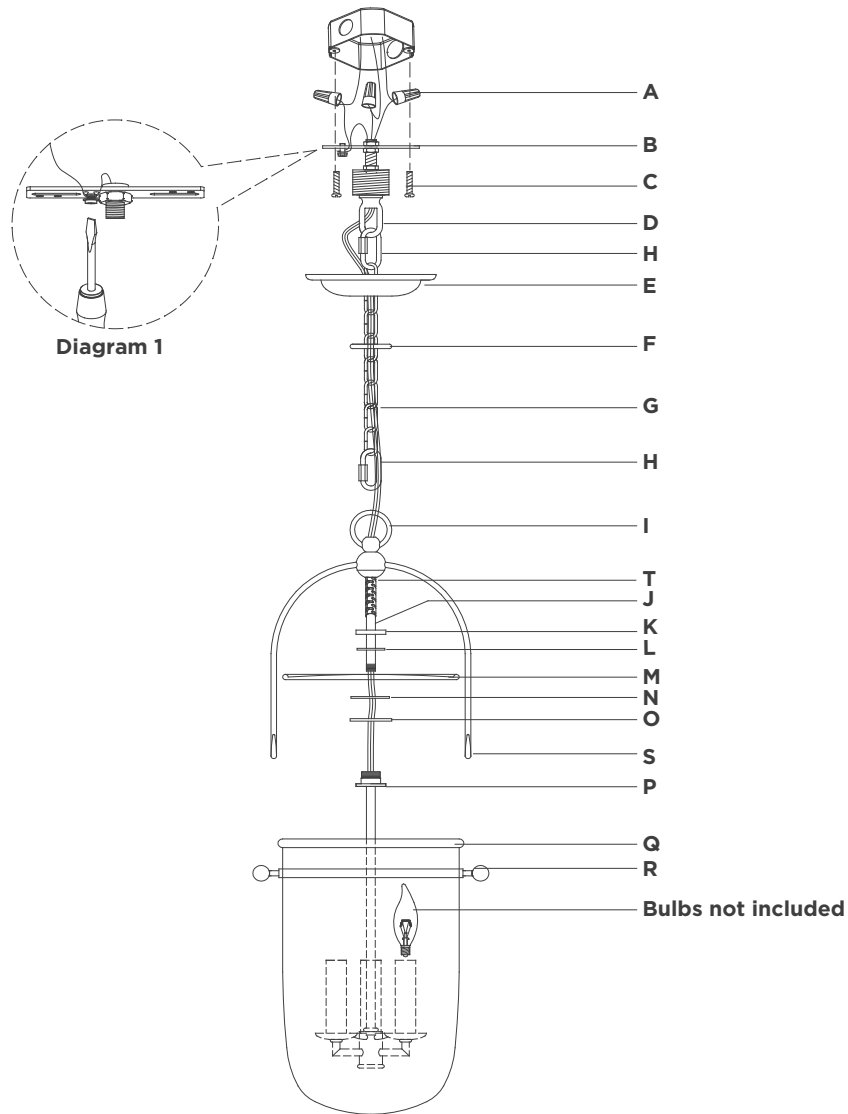

## Lorford Tall Smoke Bell Lantern

Item # CHC 2298

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL.**


**IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

12. Thread fixture wire and ground wire through chain (G).  
**NOTE:** When you reach the collar loop (D), ensure there is no tension on the wires. Cut excess wires, being sure to leave about 12" to reach the junction box.
13. Separate two sides of molded wire, and strip insulation on each 5/8".
14. Loosen collar ring (F) and let canopy (E) slip down chain (G) carefully.
15. Twist all fixture wires together. Slip through center hole of collar loop (D).  
**NOTE:** Untwist wires and separate to prepare for connection.
16. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).  
**NOTE:** It is imperative that the fixture is grounded.
17. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut (A).
18. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut (A).  
**CAUTION:** Do not reverse the hot and neutral connections.
19. Make sure all wire connections are tight, then carefully tuck into the junction box.

## ASSEMBLY INSTRUCTIONS

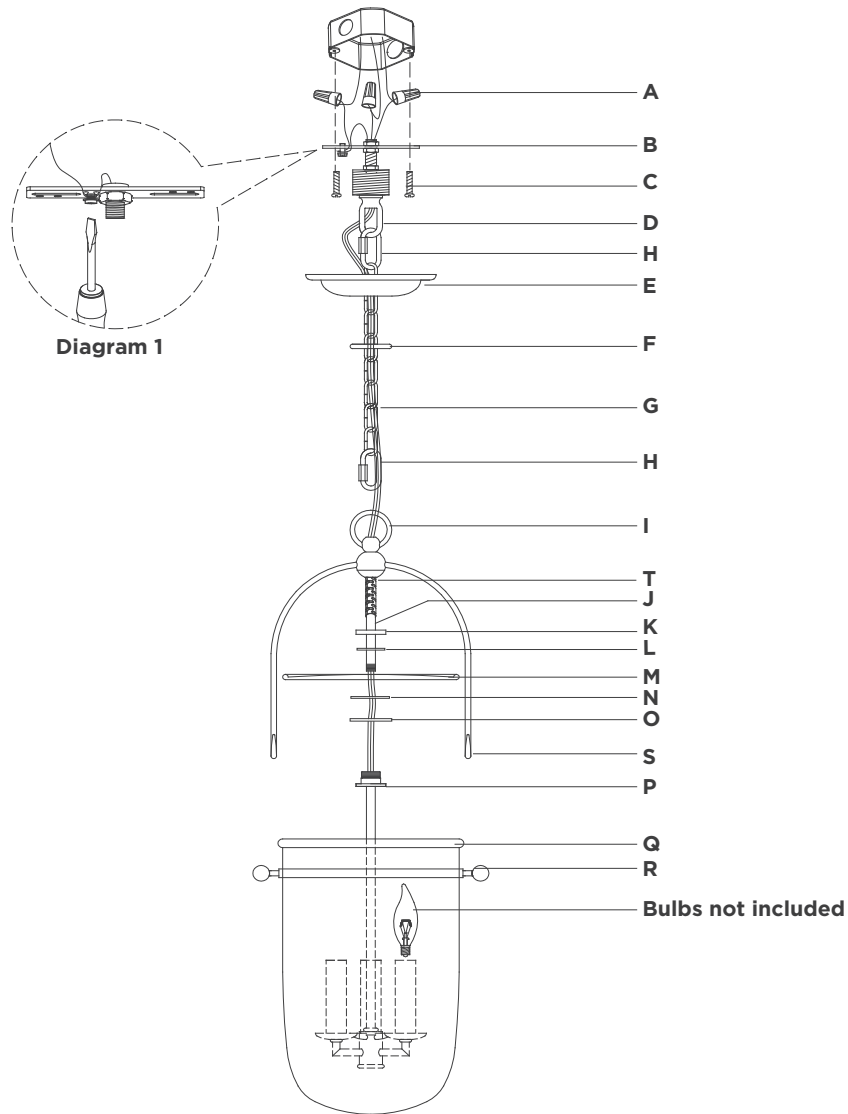

### Lorford Tall Smoke Bell Lantern

Item # CHC 2298

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL.**

**IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

20. Install canopy (E) to collar loop (D) and secure with collar ring (F).
21. Install light bulbs into the sockets.
22. Put glass shade (Q) into metal ring (R), then hang metal ring (R) to hooks (S).
23. Installation is complete.

\* \* \* Clean with a dry, soft cloth only. Do not use harsh abrasives or chemical agents.

\* \* \* For mercury glass, clean with a feather duster. Wiping with a cloth or cleaning solvents may remove antiquing.