


ASSEMBLY INSTRUCTIONS

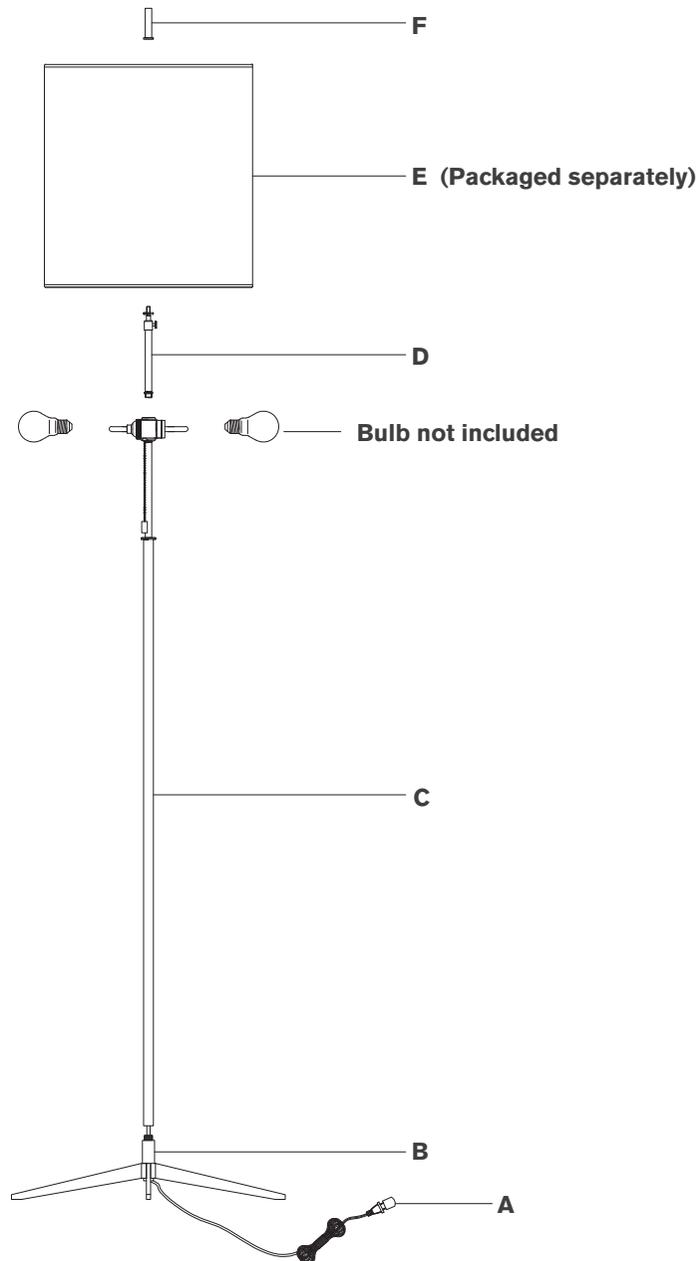

Caron Floor Lamp

Item # TOB 1153

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Scissors

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Thread body tube (C) to base (B).
3. Thread shade riser (D) to the top of lamp body. adjust shade riser (D) to desired height, the tighten adjustment knob.
4. Remove finial (F) from shade riser (D).
5. Remove shade (E) from packaging and install to shade riser (D) by securing with finial (F).

NOTE: If shade has additional packaging, carefully cut off from interior of shade to avoid damages.

6. Install light bulbs into the sockets.
7. Remove protective cover (A) from plug.
8. Plug into electrical outlet and test fixture.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT

