


ASSEMBLY INSTRUCTIONS

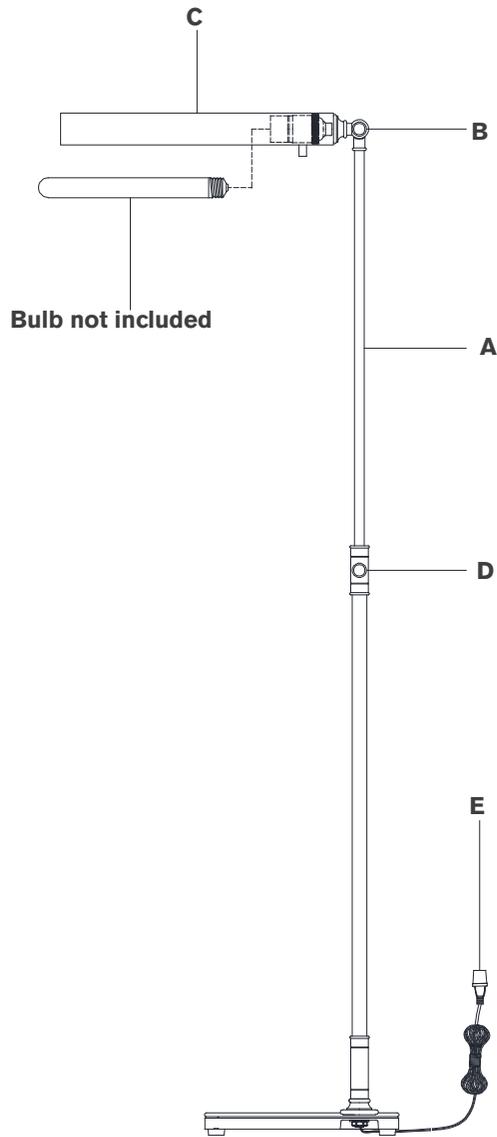

Lawton Medium Adjustable Pharmacy Lamp

Item # CHA 9165

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Scissors

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Loosen adjustment knob **(D)** and adjust rod **(A)** to desired height, then tighten adjustment knob **(D)**.
NOTE: Help feed electrical cord in or out of lamp for smoother adjustment.
3. Loosen adjustment knob **(B)** and adjust shade **(C)** to desired angle, then tighten adjustment knob **(B)**.
4. Install light bulb into the socket.
5. Remove protective cover **(E)** from plug.
6. Plug into electrical outlet and test the fixture.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.